



C9 Black OS Update

iDTRONIC GmbH
Ludwig-Reichling-Straße 4
67059 Ludwigshafen
Germany/Deutschland

Telefon: +49 621 6690094-0
Fax: +49 621 6690094-9
E-Mail: info@idtronic.de
Web: idtronic.de

Ausgabe 0.2
– 07. June 2024 –

Änderungen ohne vorherige Ankündigung vorbehalten.
© Copyright iDTRONIC GmbH 2024
Printed in Germany

Inhalt

1 Preparation4

 1.1 Tools Needed 4

2 Update Steps.....4

 2.1 De-energising the Device 4

 2.2 Start Update Software 4

 2.3 Select update file in update software 4

 2.4 Start Updating..... 5

 2.5 If it does not work..... 6

3 Restarting the Device after the Update6

4 Brief Summary · Kurzbeschreibung.....7

1 Preparation

1.1 Tools Needed

- Updating Software: MT6735_SP_Flash_Tool_exe (you don't need to install this software)
- System File in RAR archive
- Windows PC

Drivers are automatically installed as of Windows 10.

2 Update Steps

2.1 De-energising the Device


Disconnect the device from the USB port. Shut down the device and remove the battery pack. The device to be updated must be de-energised.

2.2 Start Update Software


Go to the folder: SP_Flash_Tool_exe_Windows_v5.1936.00.000

Start this software there: flash_tool.exe

You may receive this error message, which you can simply click away:

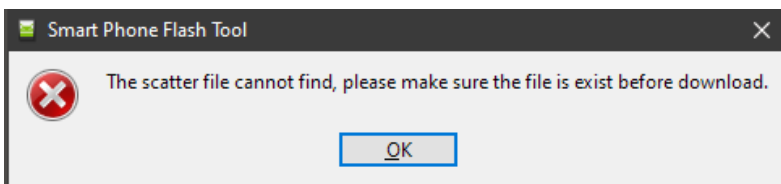


2.3 Select update file in update software

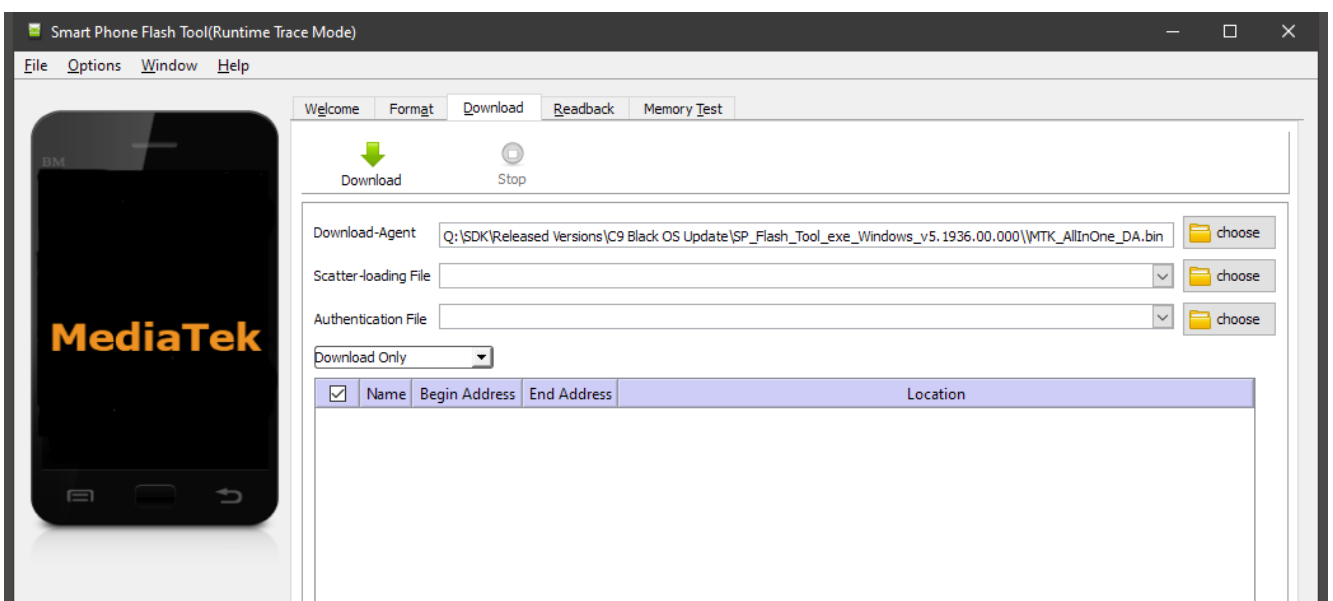

In the 'Scatter-loading File' line, click on the [choose] button on the right. Navigate to the folder with the OS image (or with a more recent date).

Select this file there: 'MTxxxx_Android_scatter.txt' and select [Open]
Now wait for the files of the new operating system to load:

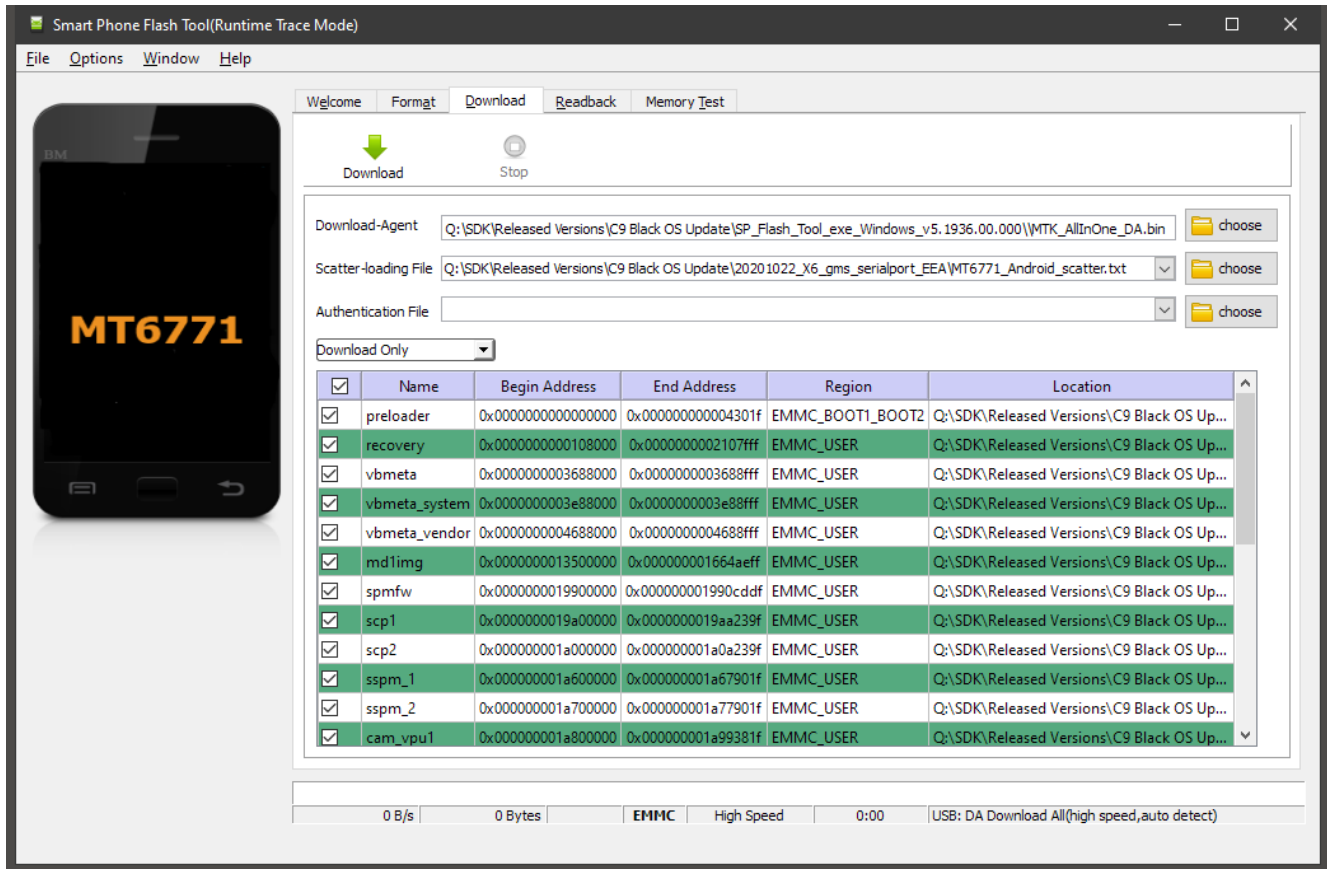

2.4 Start Updating

WARNING: Never select the 'Format' function!


The 'Download Only' function is probably selected in the pull-down menu. This is correct.




Download

Now start the process by clicking on Download and connect the device to be updated. Do not start the device, just connect the USB cable.

Several progress bars should now appear at the bottom of the software. The last one is yellow, takes longer and installs most of the operating system.

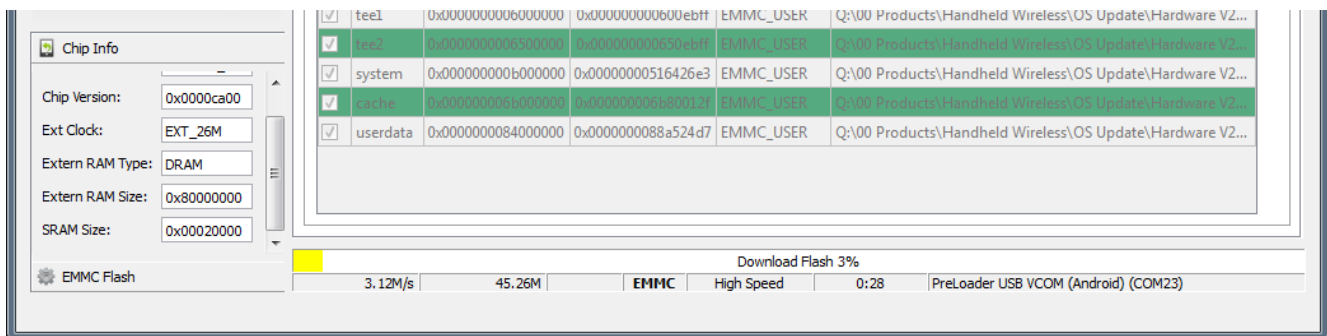

This process can take several minutes. At the end, the yellow progress bar should have reached 100 % and a confirmation dialogue will show successful completion.

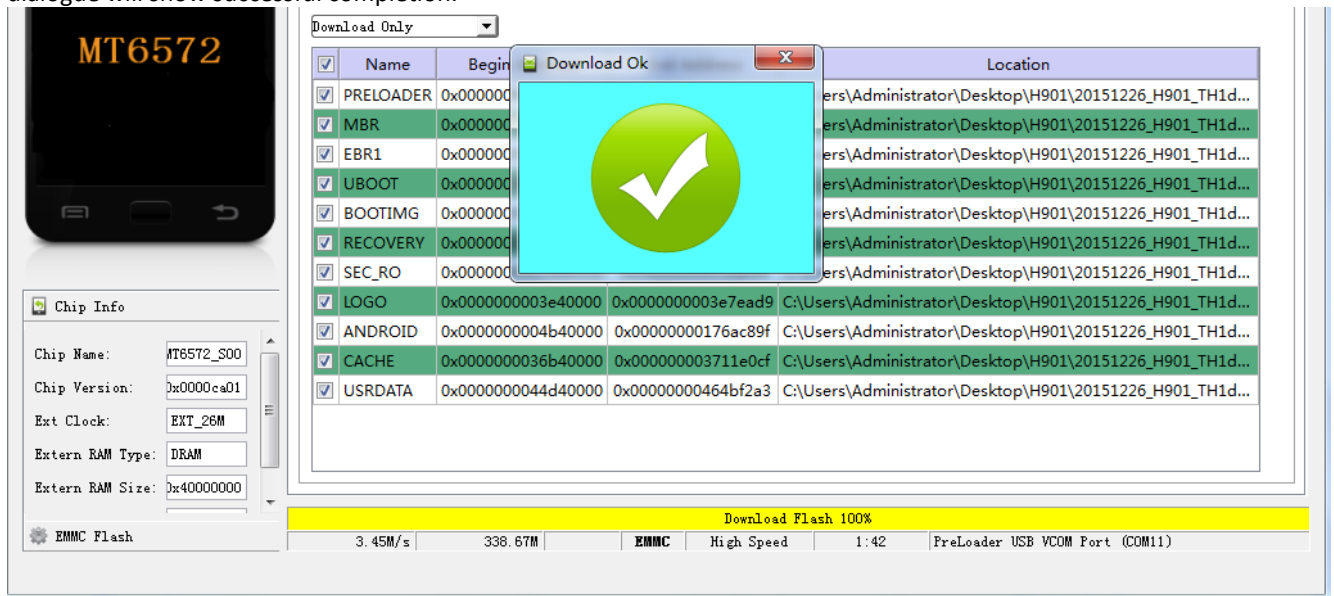

2.5 If it does not work

Disconnect the USB connection to the device, select [Firmware Upgrade] instead of [Download Only] in the pull-down menu and repeat the procedure.

WARNING: Never select the 'Format' function!

3 Restarting the Device after the Update

1. Disconnect the device from the USB port. It is now de-energised again.
2. Reinsert the battery pack and close the cover for a secure contact.
3. Press the power button for several seconds.
4. The start-up process will now take a very long time.

4 Brief Summary · Kurzbeschreibung

Device is NOT connected with your PC	Gerät ist nicht am PC angeschlossen
Switch OFF device	Gerät ausschalten
Remove battery pack	Akkupack entnehmen
Flash Tool starten	Flash Tool starten
Select Scatter file	Scatter auswählen
Select "Download only" to update to the same Android version. For Upgrade to a mayor release chose "Firmware Upgrade"	Wählen Sie „Download only“ aus um eine Aktualisierung der gleichen Android-Version vorzunehmen. Wenn sie auf eine neuer Hauptversion aufstocken, wählen Sie „Firmware Upgrade“
Click [Download]	Download klicken
Plug in the USB connector	Gerät per USB verbinden
The procedure will start automatically	Die Prozedur sollte jetzt automatisch ablaufen