






Quickstartguide for iDTRONIC HF RFID Readers

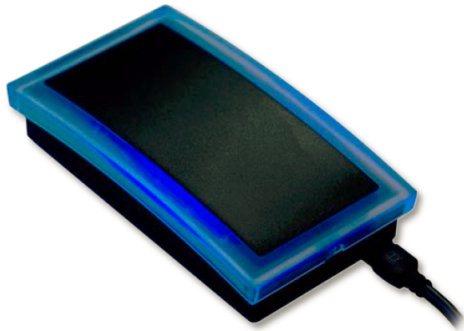

Installation HF-Version

Please refer to this installation guide to start both software and reader successfully.

1. Download the appropriate software from: <http://idtronic-rfid.com/de/support/sdks/>
2. Unpack the zip folder to a folder of your choice.
3. Open the folder "Card Reader HF SDK_NOV14", and then open the folder "Software".
4. Connect the reader to USB-Port of your computer.
5. Check in the Windows Device Manager if the driver for the USB-Port is installed.
If it is not installed, then click on this driverless port and select update driver-software, please use the driver from the folder "Driver" → "Silicon Labs Driver"
6. Start the file "RFIDReader.exe".
7. Select the appropriate Com-Port and click the "Connect" button.

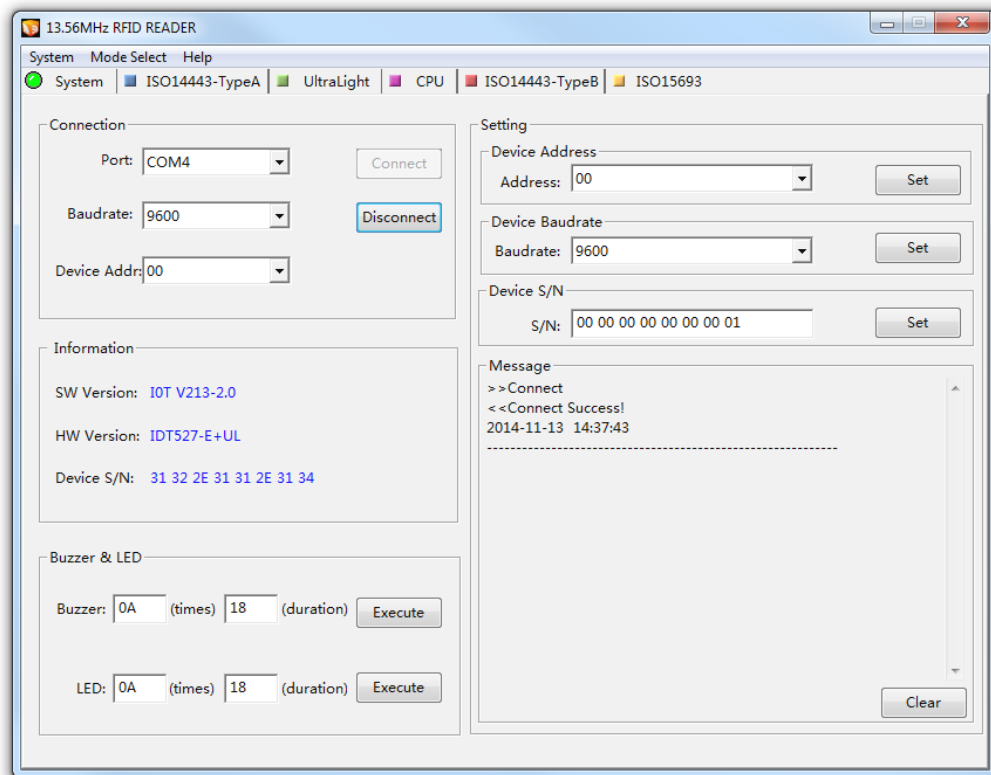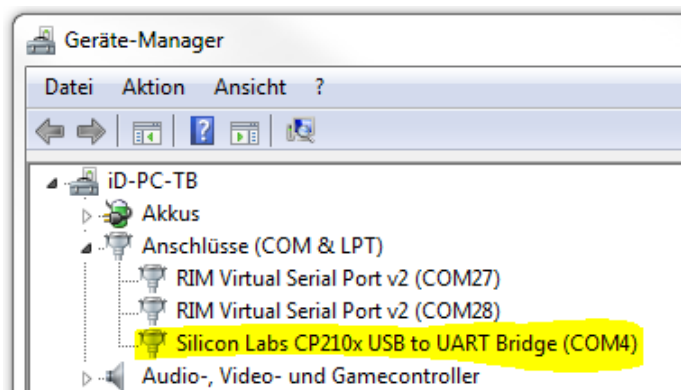

8. Now you can proceed to read and write tags. For more detailed information, please refer to **Testsoftware Manual_1.1_M840** (pdf).