




## Quick Start Guide for iDTRONIC TEMIC Reader R-DT-EVO-TEMIC-USB

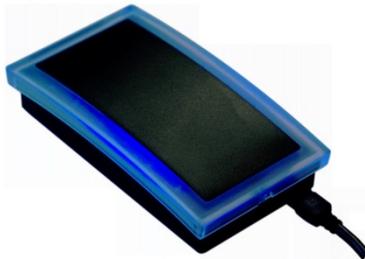

### Compatible Products

This Quick Start Guide describes operation of the following RFID devices by iDTRONIC:

- R-DT-EVO-TEMIC-USB

### Procedure

- Connect the reader to an USB port of a PC.
- The driver will be automatically installed. Wait for this process to finish.

### Functions of the Software “A&12557”

“Traceability [F4]”

Returns the Serial Number of the tag.

“Read [F3]”

Reads a 10 digits hex code (5 Bytes) from the tag.

“Write[F2]”

Insert a 10 digits hex code (5 Bytes), then write it onto the tag.

The length of the input must be EXACTLY 10 characters.

„Codifica“

Apromix      the code is written as is

Coding 1      the code is written byte-wise in bit-reversed order, so e.g. “01” => “80”

Coding 2      the code is written nibble-wise in bit-reversed order, so e.g. “01” => “08”