



SHANDONG MINGWAH AOHAN SMART TECHNOLOGY CO.,LTD


Tel: (+86-531)66955507

Fax: (+86-531)66898689


Web: www.mwrfidcard.com

There are 2 ways to test the BT reader

1、 use IVT BlueSoleil

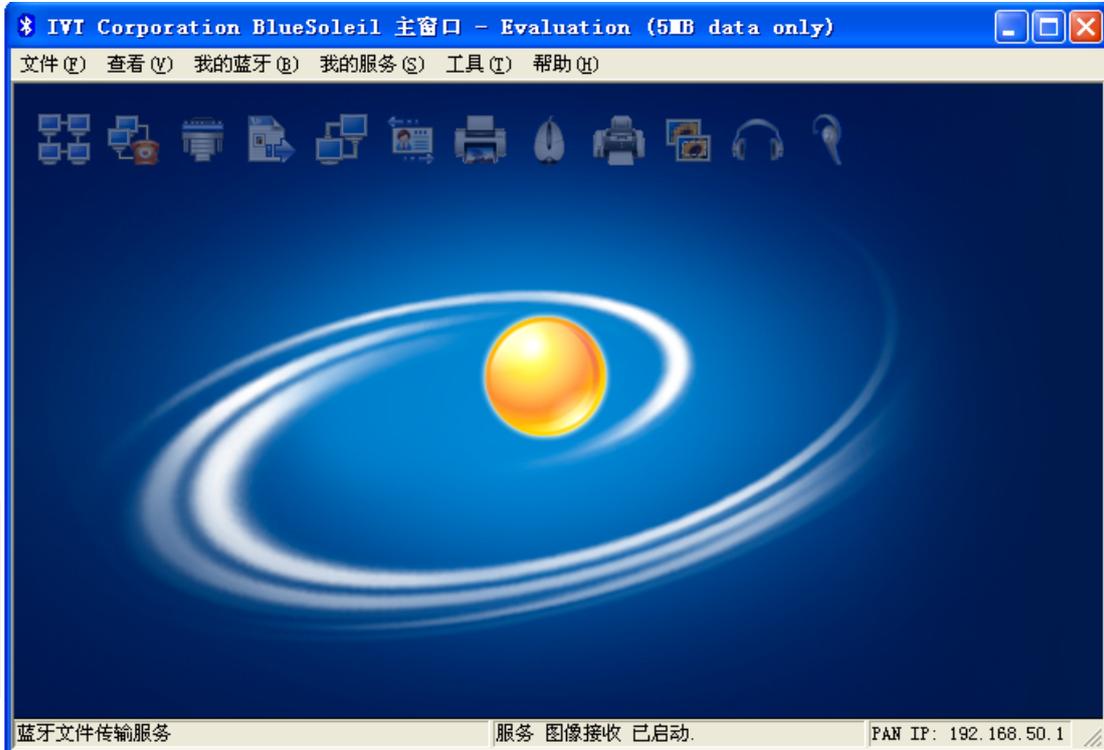

Find the BT reader

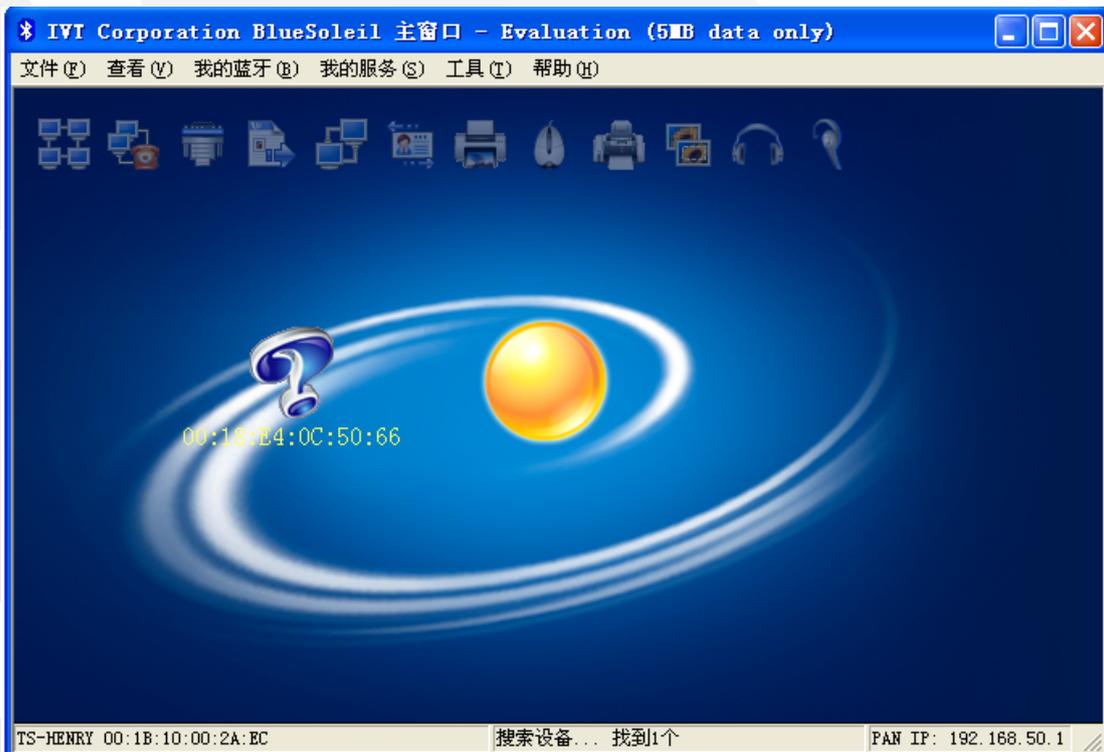




Connect the reader via com4




Input pin 0000

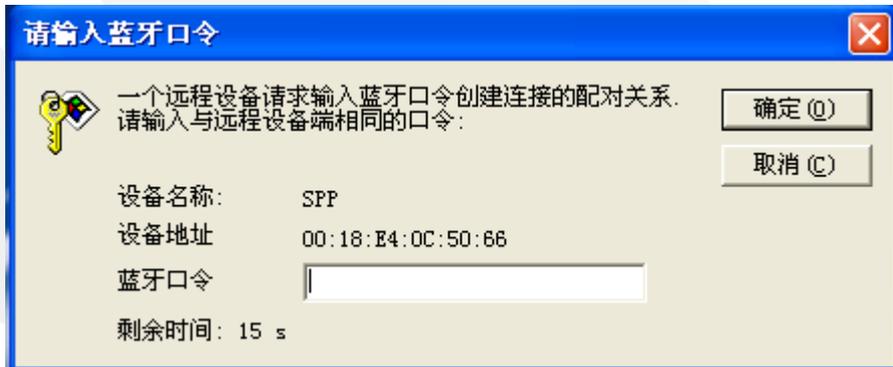

Connect successfully




Use the PC-DOME to test

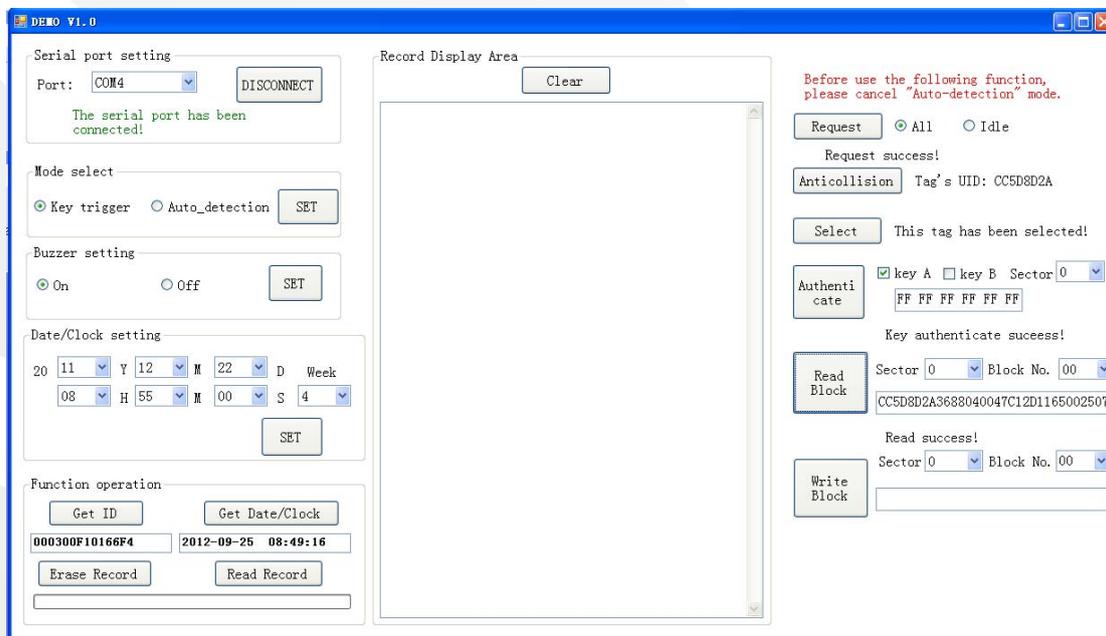




2、 use data cable

after connect the reader, you will find a new hardware

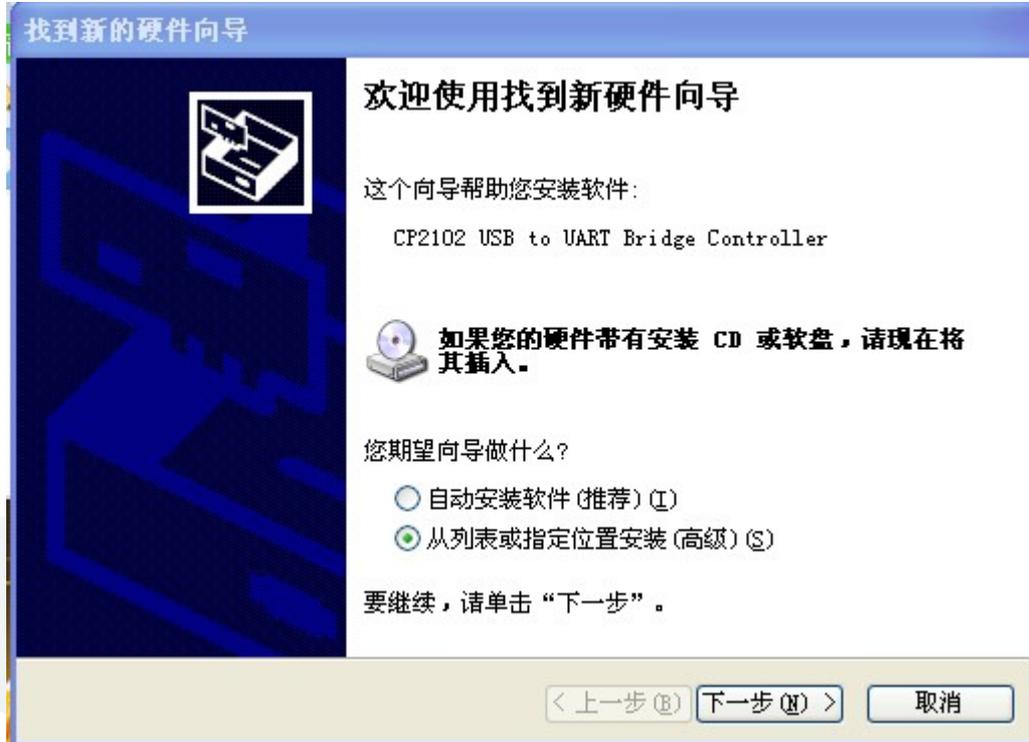


And select install the driver yourself

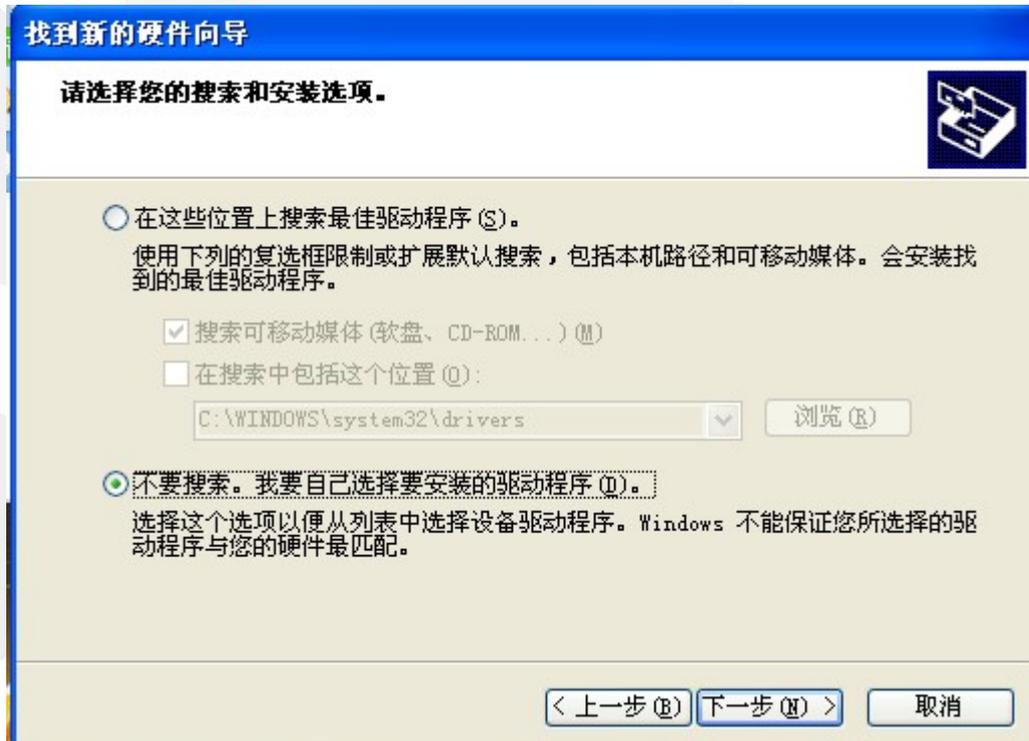





Then install from disk

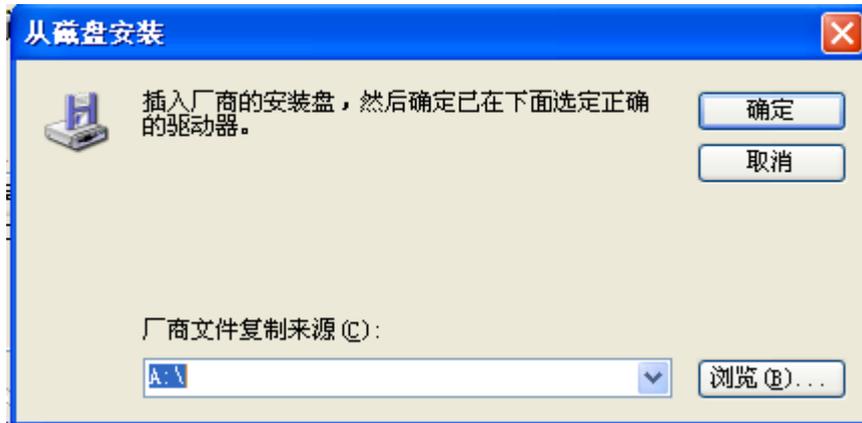

Find \cp210x\slabbus

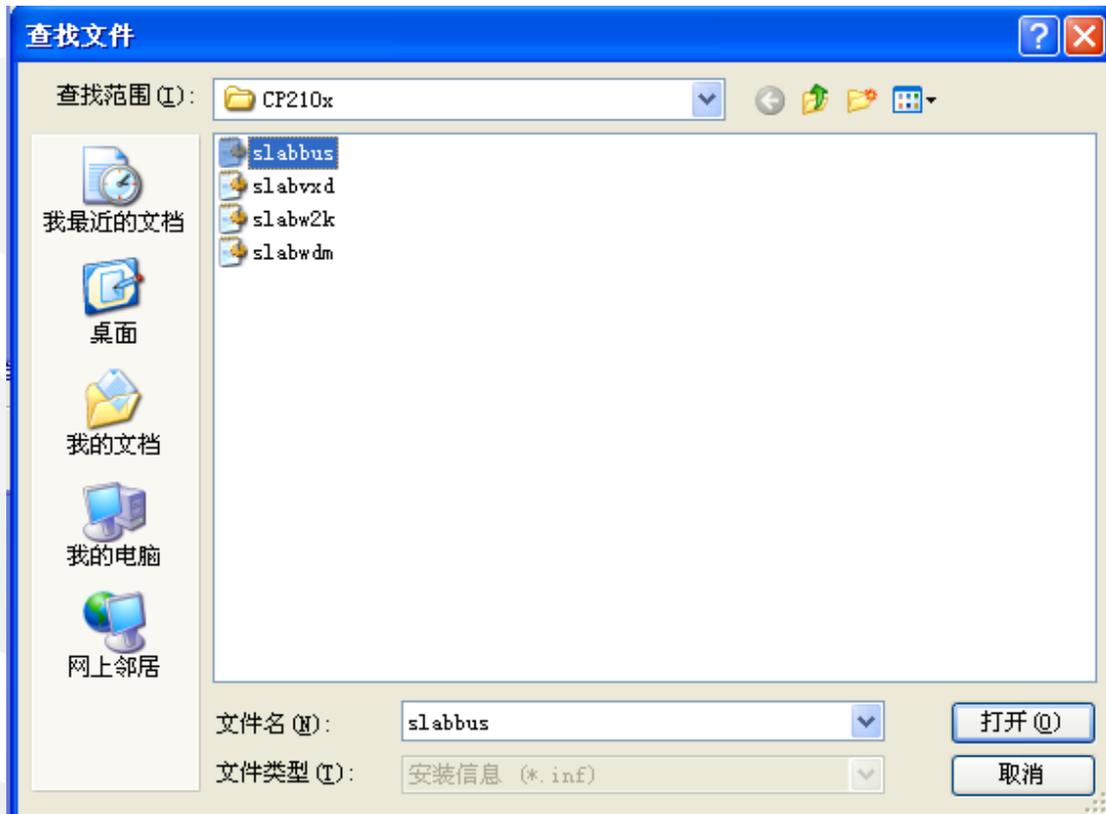

After install, you will find a new vcom port

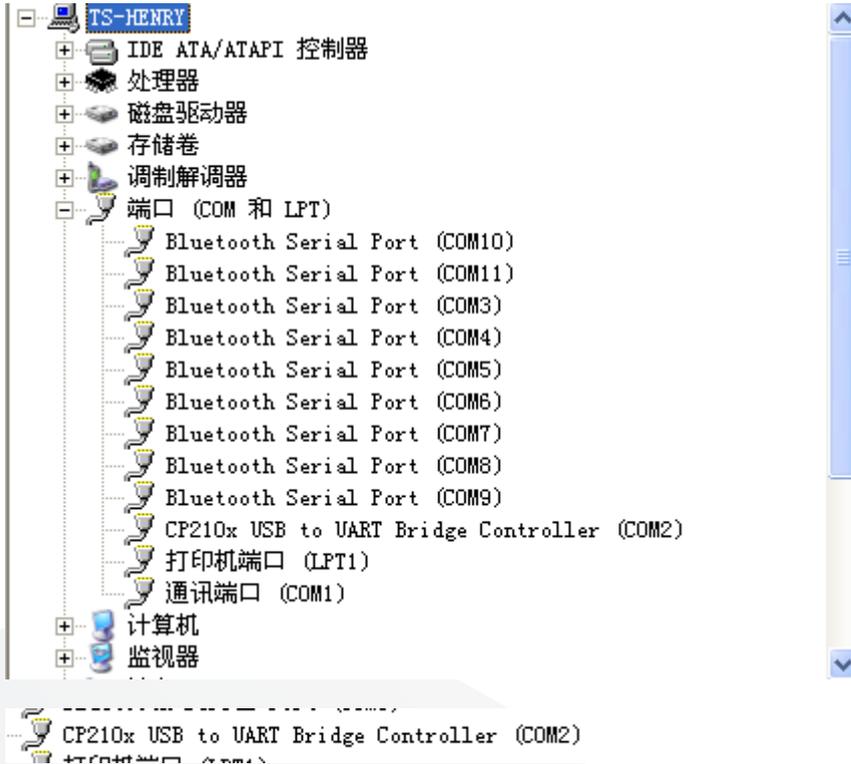

Then use the com2 to test on PC-DOME

